


**Assembly instructions
Nucleo-144 Insert
zr-sbc-909 (J)**



The smart difference.

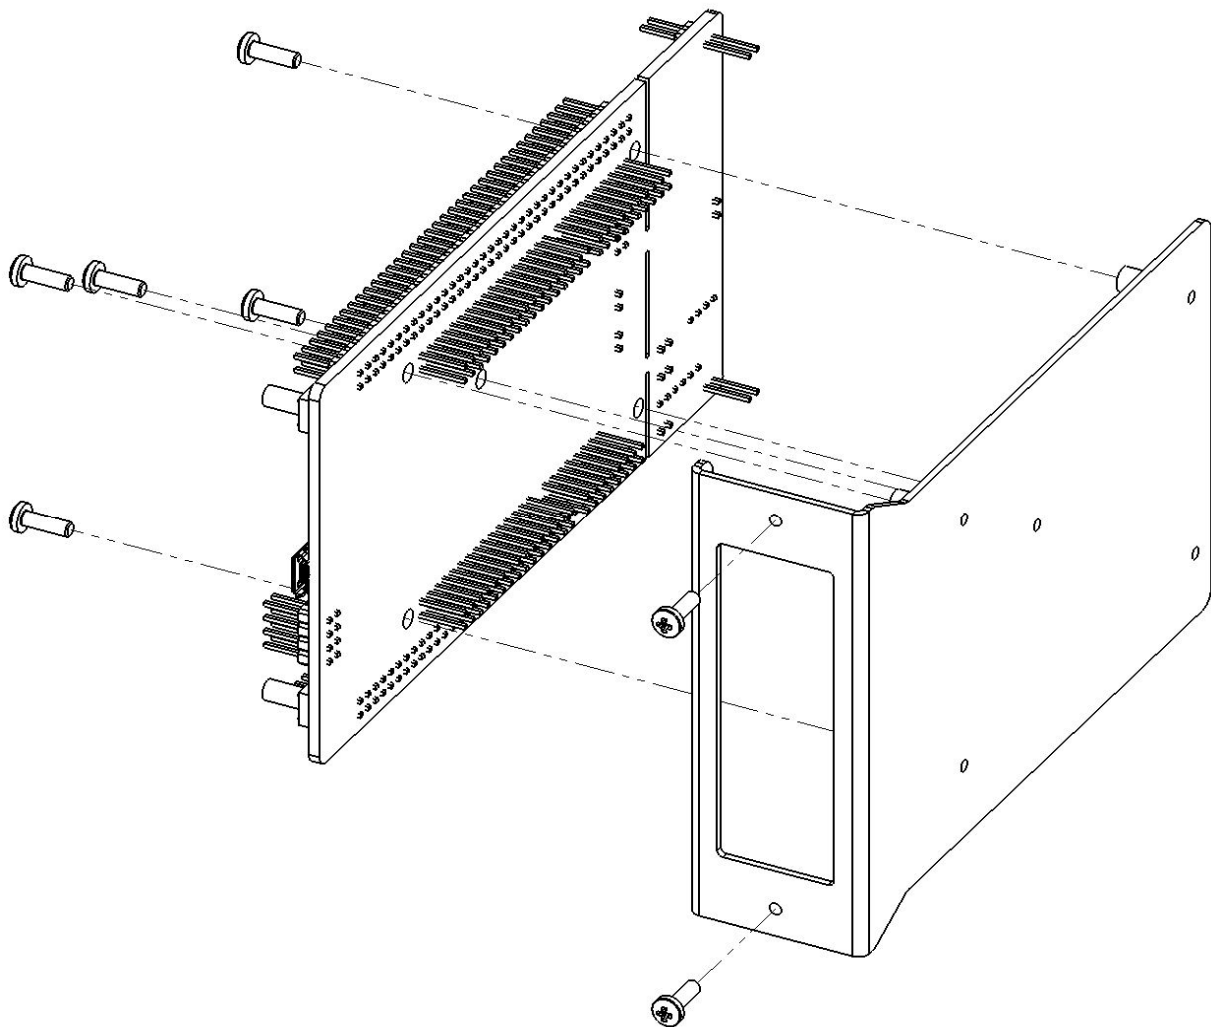


Fasten Nucleo-144 Insert

Fasten the Nucleo-144 to the bracket using the M2.5x6 screws (included in the scope of supply).

Fasten the **Nucleo-144 Insert** to the Rack Mount Kit using the M2.5x6 screws (included in the scope of supply).



Nucleo-144 board (top view)

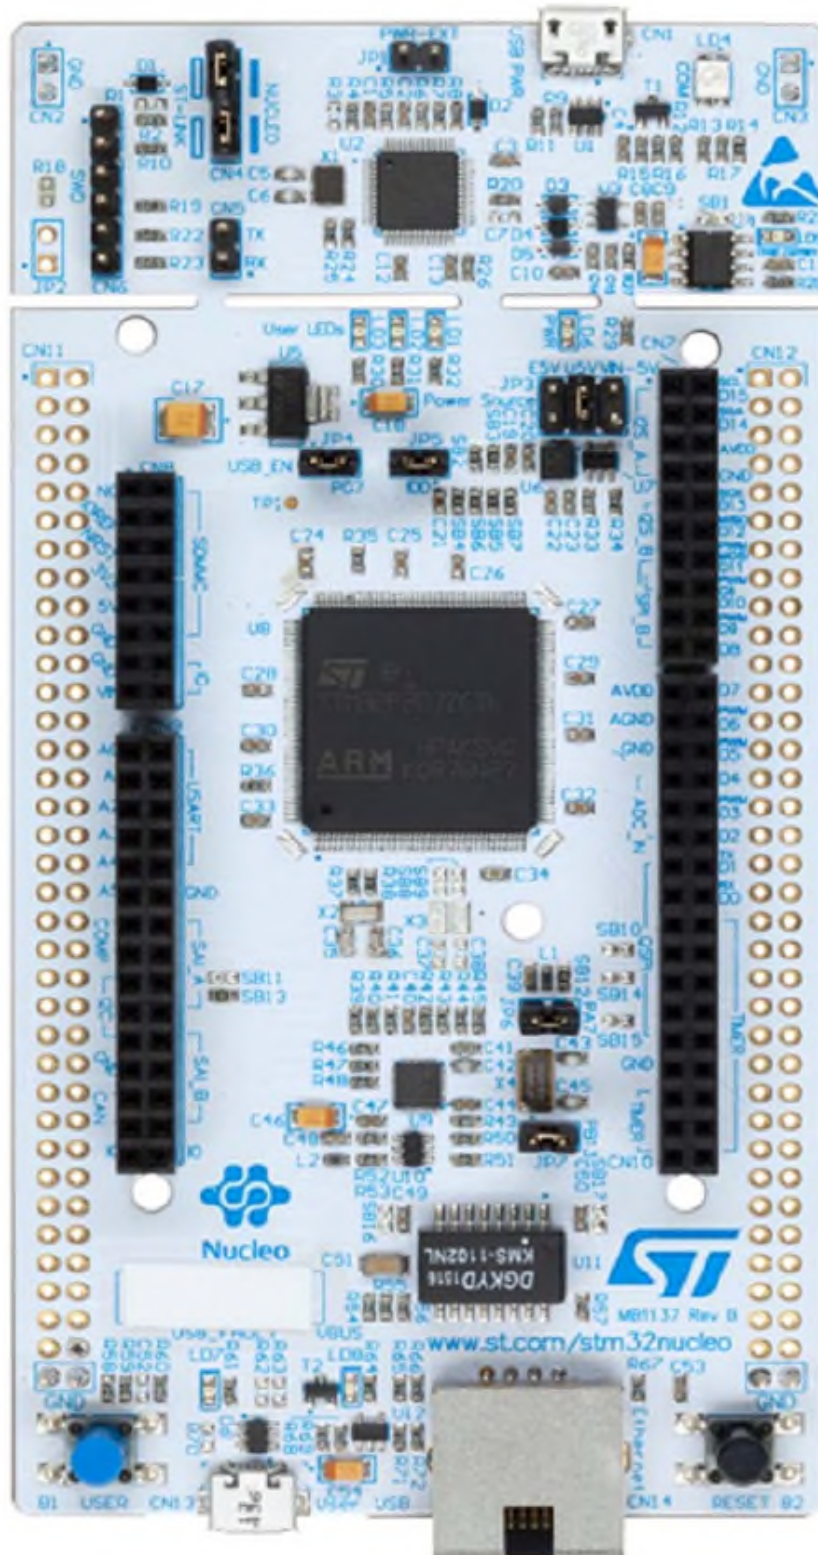

The smart difference.